

Data sheet

OMNIPOWER® single-phase

- Single-phase residential meter
- Prepared for smart home applications
- Optimised for smart metering systems
- Secured against tampering
- Resistant to errors in the supply network
- Ultra-low power consumption
- Remote firmware update
- Power quality measurements according to EN 50160
- Type approved according to:
 - Active energy
EN 50470-1 (MID)
EN 50470-3 (MID)
 - Active energy
and reactive energy
IEC 62052-11 (IEC)
IEC 62053-21 (IEC)
IEC 62053-23 (IEC)
- Communication protocol:
 - DLMS/COSEM



Contents

Application	3
Functions	4
Approvals	8
Technical data	8
Connections	10
Communication	10
Consumer communication channel (CCC) module	10
Typical accuracy charts	11
Configuration – hardware	12
Configuration – software	13
Installation	18
Safety and installation guidelines	18
Dimensions	19
Accessories	20

Application

OMNIPOWER® single-phase meter is a direct connected electricity meter for registration of electric energy. The meter is fully electronic without movable parts. Thus, energy registration is not affected by shock or impact during transport and mounting. Furthermore, measurements are correct no matter the physical mounting direction.

The shunt measuring principle secures good linearity and a considerable dynamic range. At the same time, the shunt measuring principle is immune to magnetism and DC currents.

The easily readable display scrolls automatically between readings, or readings can be changed manually by the consumer activating the left push button. The required display readings as well as their order are configurable.

In addition to being read from the display, data can be collected via Radio Mesh network, optical output or from the module area. The unique module area also permits external changing of tariffs, pulse inputs and outputs, and configuration as well as a wide range of communication media.

From the factory, the meter can be configured to measure both imported and exported energy. Measurements are saved in a permanent memory.

As default, OMNIPOWER® single-phase meter can generate load profiles in all four quadrants. A load profile provides detailed information about consumed and produced energy. An additional logger with 24 channels contains data for analysis purposes.

As default, OMNIPOWER® single-phase meter is supplied with the functions Smart Disconnect and software controlled Prepayment.

The OMNIPOWER® single-phase meter is also designed to support extended analysis of the main grid using measurements of THD, power factor, voltage unbalance, voltage variations and sags and swells.


In order to minimise the manual configuration during installation, the meter is pre-configured from the factory. Furthermore, the meter can be reconfigured via a smart metering system.

Functions

Display

OMNIPOWER® single-phase meter is provided with a liquid crystal display (LCD). The registers that can be read from the display depend on the chosen configuration. It is also possible to remotely configure the display.

The display configuration is constructed as three independent display lists: One for automatic shift function, one for manual shift function and one for battery-powered shift function. The display is constructed of segments as shown in the figure below.

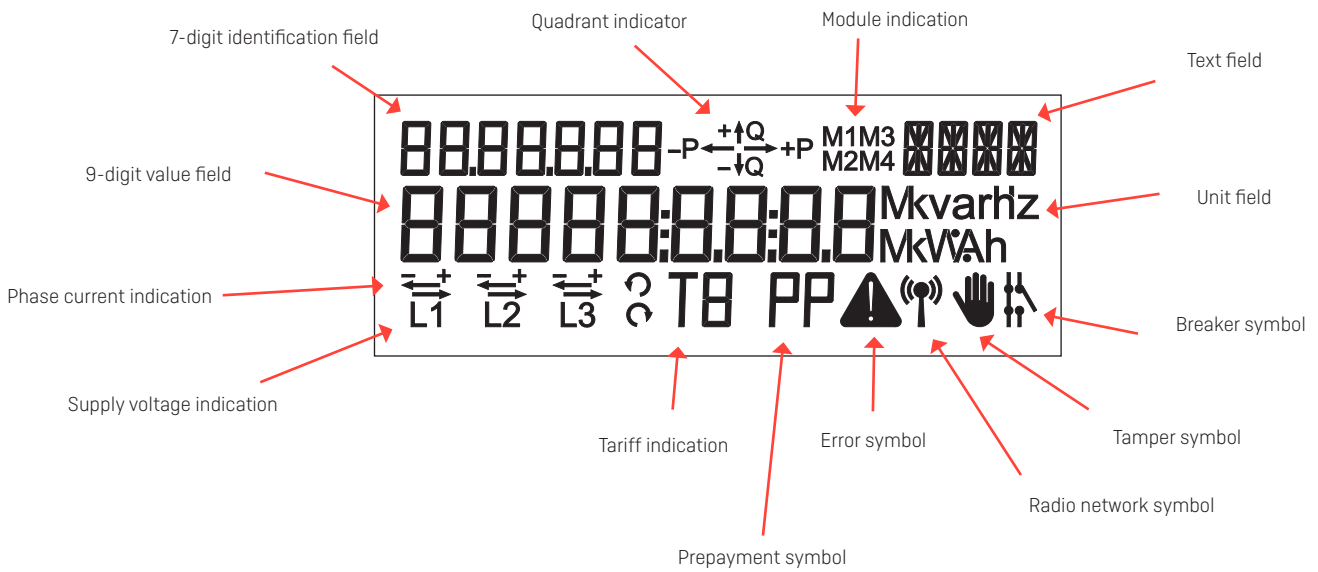

9-digit value field:	This field is used for displaying register values.
Unit field:	This field is used for displaying the units that are related to the value field.
7-digit identification field:	OBIS code identification of the value in the value field.
Quadrant indicator:	Indicates the current load type.
Text field:	Contains additional text in connection with the meter's function.
Module indication:	Indicates if and which modules that communicate in the display.
Error symbol:	Indicates critical internal errors.
Breaker symbol:	Indicates the current position of the breaker if smart disconnect is enabled. If smart disconnect is disabled or the meter is without breaker, there is no indication.
Tamper symbol:	Indicates magnetic influence or opening of the terminal cover, either temporarily or permanently.
Radio network symbol:	Indicates communication with AMR systems.
Prepayment symbol:	Indicates whether the prepayment functionality is activated.
Tariff indication:	Indicates the current tariff if tariffs have been selected.
Supply voltage indicator:	Indicates that the voltage is above the minimum threshold (160 V).
Phase current indication:	Indicates that the load is above the minimum threshold (2.3 W).

Functions

Display

The automatic shift function (scroll) changes between the selected readings every 10 seconds. Up to 16 readings can be selected.

The manual shift function changes through activation of the left push button. Up to 30 readings and the reading order can be selected. However, it is not possible to deselect the **legal** readings.

If the battery-operated shift function is selected, it becomes possible to read the display, also when the meter is not power supplied. Up to 8 readings can be selected, and shifts between readings are made by activating the push button.

The meter automatically returns from manual shift function to automatic scroll function two minutes after the last activation of the left push button.

Energy reading

OMNIPOWER® single-phase meter has a shunt for current measurement and resistance division for voltage measurement.

Energy consumption is calculated as an expression of the current compared to the phase voltage and time.

The energy registration is communicated to the meter's legal processor via the meter's own internal bus system and is summed in the meter's main registers.

Permanent memory

Measured and calculated data are stored in the meter's permanent memory. Data are stored by every change of energy register values.

Furthermore, the below values are stored at the end of a debiting period:

Various	Energy registers	Power registers
RTC w/Quality info	Active positive energy A+	Peak power P+max
Hour counter	Active negative energy A-	Peak power P+max RTC
Debiting stop counter	Reactive positive energy R+	Peak power P+max Tariff 1
Power threshold counter (A+)	Reactive negative energy R-	Peak power P+max Tariff 1 RTC
Pulse input	Apparent positive energy E+	Peak power P+max Tariff 2
	Apparent negative energy E-	Peak power P+max Tariff 2 RTC
	Active positive energy A+ Tariff 1	Accumulated peak power P+max
	Active positive energy A+ Tariff 2	Accumulated peak power P+max Tariff 1
	Active positive energy A+ Tariff 3	Accumulated peak power P+max Tariff 2
	Active positive energy A+ Tariff 4	Peak power Q+max
	Reactive positive energy R+ Tariff 1	Peak power Q+max RTC
	Reactive positive energy R+ Tariff 2	Peak power Q+max Tariff 1
	Reactive positive energy R+ Tariff 3	Peak power Q+max Tariff 1 RTC
	Reactive positive energy R+ Tariff 4	Peak power Q+max Tariff 2
		Peak power Q+max Tariff 2 RTC
		Accumulated peak power Q+max
		Peak power S+max
		Peak power S+max RTC
		Peak power S-max
		Peak power S-max RTC

Functions

Plug-in modules

OMNIPOWER® single-phase meter can be mounted/retrofitted with plug-in modules without subsequent reverification.

The module communicates with the meter's microprocessor via an internal data bus. This provides innumerable functional possibilities such as extra pulse output, tariff, load control and data communication via e.g. GSM/GPRS and M-Bus.

Optical reading

An optical interface is placed on the front of the meter. This optical connection can be used to read data or configure e.g. display set-up, meter number and other settings.

Changes via the optical connection can be made by using the software program METER-TOOL OMNIPOWER®.

It is not possible to change the meter's legal data.

S0 pulse output

Emits pulses of active energy at 1000 pulses per kWh. The pulses are emitted synchronously with the LED. The maximum voltage, which may be connected to the S0 output, is 27 V DC (at 1 k Ω), and the maximum current, which can be drawn through the output, is 27 mA. The pulse time is 30 msec.

Breaker

OMNIPOWER® single-phase meter is available with integrated disconnection function which makes it possible to disconnect the electricity meter's supply outputs. The disconnection can be made locally by activating the meter's push button, automatically via the functions Smart Disconnect or Prepayment, or remotely via an automatic smart metering system.

Do **NOT** use the disconnection as a safety function.

The reconnection can be made via the same media as the disconnection. Furthermore, connection via push button can be configured to only be permitted after previous release command from a smart metering system.

The breaker is a bistable breaker that maintains its current position in the event of a power failure and after the subsequent re-establishment of power.

Functions

Load profile*

Load profiles can be configured to 15, 30 or 60 min. according to the integration period and for all four quadrants. The number of generated profiles corresponds to the selected energy type for the meter.

Logging depth in days:			
Minutes	15	30	60
A+	278	556	1113
A+/A-	235	470	941
A+/A-/R+/R-	180	360	720
A+/A-/R1/R2/R3/R4	145	291	583
A+/A-/R+/R-/R1/R2/R3/R4	122	244	489

* Load profile for Austria is limited to 60 days with a fixed integration period of 15 min.

The logging depths listed above apply to OMNIA 3.0 firmware and newer.

Analysis logger

OMNIPOWER® single-phase meter is provided with a configurable analysis logger. The logging depth is depending on the configuration of the meter as well as the number of registers. The analysis logger can register data from up to 24 different registers at a time. OMNIPOWER® single-phase meter is available with default settings which can be reconfigured subsequently via METERTOOL OMNIPOWER® or a smart metering system.

Tamper proof

Apart from the mechanical sealing, the meter also reveals tampering. In case of attempts of tampering (mechanical or magnetic), an alarm is activated which is time and date stamped and saved in the permanent memory. Alarms can be automatically transferred via the communication infrastructure and, in some cases, indicated on the display. Magnetic influence does not affect the measuring accuracy.

Approvals

OMNIPOWER® single-phase meter is type approved according to the Measuring Instruments Directive (MID) for active positive energy and according to the national requirements for other energy types, where required.

Approval	Norm
Type test according to:	
– Active energy	EN 50470-1 EN 50470-3
– Reactive energy and active energy	IEC 62052-11 IEC 62053-21 IEC 62053-23

Various	Norm
Terminal	DIN 43857 (partly)* or BS 7856
S0 pulse output	DIN 43864
Optical reading	DLMS/COSEM
OBIS/EDIS codes	IEC 62056-61

* The internal distance between terminals deviates from DIN 43857.

Technical data

Measuring principle	
– Current	Current measurement by current shunt
– Voltage	Voltage measurement by voltage divider
Nominal voltage U_n	230 VAC -20 % - +15 %
Current	$I_{min} - I_{ref} (I_{max})$

OMNIPOWER® single-phase meter	
Without breaker	With breaker
0.25-5(100)A 35 mm ²	0.25-5(100)A 35 mm ²

Accuracy class	MID: Class A, Class B IEC: Class 2, Class 1
Nominal frequency f_n	50 Hz ± 5 % or 60 Hz ± 5 %
Phase displacement	Unlimited
Operating temperature	-40 °C - +70 °C
Storage temperature	-40 °C - +85 °C
Protection class	IP54
Protection class	II

Technical data

Relative humidity	< 75 % year's average at 21 °C < 95 % less than 30 days/year, at 25 °C
Weight	1100 g with breaker/800 g without breaker
Application area	Indoors or outdoors in suitable meter cabinet
Internal consumption*	

OMNIPOWER® single-phase meter	Without breaker	With breaker
Maximum power consumption of the current circuits with basic current	0.01 VA	0.01 VA
Maximum power consumption of the voltage circuits	0.6 VA 0.2 W	0.6 VA 0.2 W

* Measured by notified body during type test. Measured at phase L1.

Materials	Glass reinforced polycarbonate
Data storage	EEPROM, > 10 years without voltage
Display	LCD, 7 mm digit height (value field) LCD, 5 mm digit height (identification readings) LCD, 3 mm digit height (voltage and tariff readings)
Meter constant	1000 imp/kWh
S0 pulse diode	1000 imp/kWh, kvarh Pulse time 30 ms ± 10 %
S0 pulse output	1000 imp/kWh Pulse time 30 ms ± 10 %
Short circuit level	4500 A

Real-time clock (RTC)

Accuracy	Typically 5 ppm at 23 °C
Backup	Battery life > 10 years at normal operation Supercap life > 10 years at normal operation
Supercap operating time	7 days fully charged

Connections

Main terminals Size	OMNIPOWER® Elevator terminal For use with connection:			OMNIPOWER® ST	
	Multi-cored	7-cored	Massive/terminal tube	Multi-cored	7-cored
35 mm ²	≥ 6 mm ²	≥ 6 mm ²	≥ 2.5 mm ²	≥ 6 mm ²	≥ 6 mm ²
Screws	Pz 2 or straight slot Torque: 2.5 - 3 Nm			Pz 2 or straight slot Torque: 3-3.5 Nm	
Voltage output	0.25 - 1.5 mm ² , 5 mm terminal forks				
Screws	TORX Tx 10 Torque 1 Nm				

Communication

OMNIPOWER® single-phase meter can be supplied or retrofitted with communication modules. The modules function as inputs and outputs for the meter. Mounting of modules does not require subsequent verification of the meter.

Communication Modules

Serial	Serial RS-485 or RS-232 communication or current loop with pulse inputs, tariff inputs or load control.
M-Bus	Reading via wired M-Bus system.
GSM/GPRS	Collection of consumption data via GSM/GPRS communication. Supports SMS reading.






Integrated radio

OMNIPOWER® single-phase meter can be provided with built-in radio communication. Radio communication therefore requires no mounting/retrofitting of communication module. If the meter's module area is used for another type of communication, the built-in radio communication can be deactivated.

Consumer communication channel (CCC) module

In OMNIPOWER® single-phase meter, it is possible to mount a CCC module. The module can be used for communication and data exchange with smart home products such as energy displays and external relays. The CCC module is mounted without using tools or breaking the seal of the meter. The mounting may be done by e.g. the consumer himself.

Typical accuracy charts

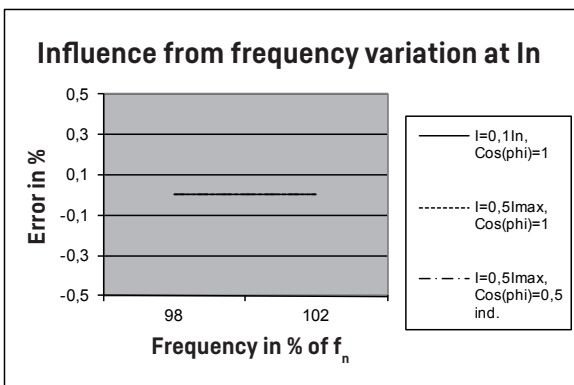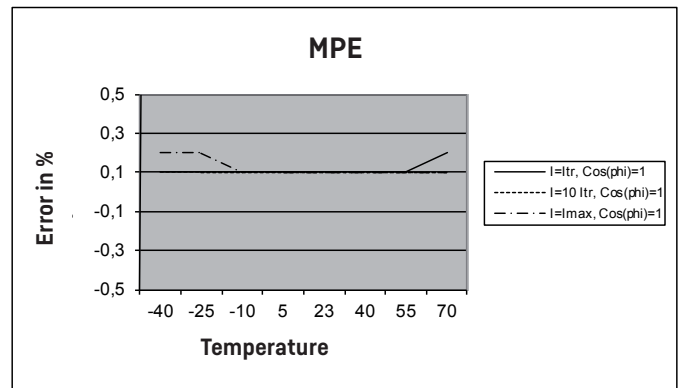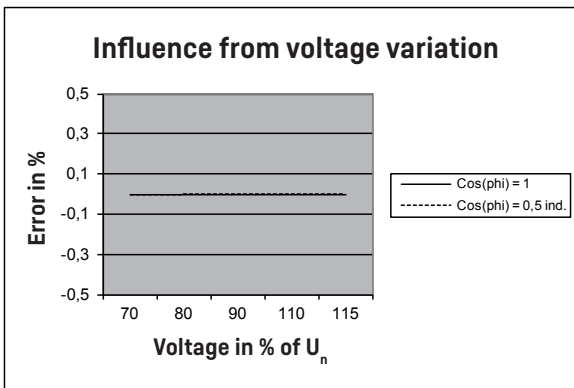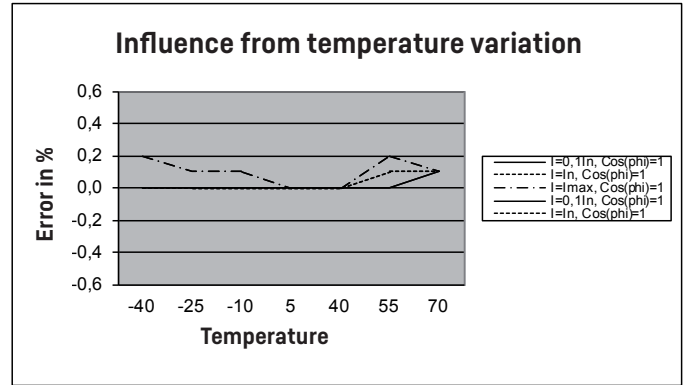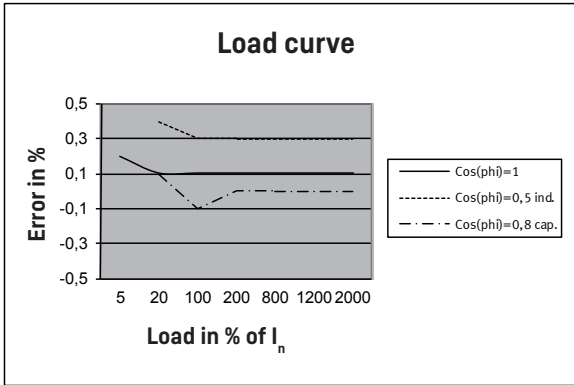

MPE (Maximum Permissible Error)

Error composed of:

- current load
- voltage variation
- frequency variation
- temperature variation

Configuration – hardware

	68	X ₁ - X ₂	X ₃ - X ₄	X ₅	X ₆ - X ₇	X ₈	X ₉ - X ₁₀	X ₁₁	X ₁₂	X ₁₃ -	X ₁₄ X ₁₅ X ₁₆
X₁ Meter type no. version											
Single-phase meter		6									
X₂ Type no. version											
OMNIPOWER®		1									
X₃ Housing											
Standard			1								
ST- meter			2								
X₄ Measuring systems											
1 system			1								
X₅ Current range											
5-100 A				1							
5-65 A				4							
10-60 A				6							
10-80 A				7							
5-80 A				8							
X₆ Accuracy Class											
Class A					A						
Class B					B						
Class 2					2						
Class 1					1						
X₇ Generation											
Generation N						N					
X₈ Variant											
1. Variant							1				
2. Variant							2				
X₉ Energy type											
A+							1				
A+/A-							2				
A+/A-/R+/R-							4				
X₁₀ Breaker											
No breaker								0			
Dual breaker								2			
Standard breaker								3			
X₁₁ Communication											
No radio									0		
Radio (For OMNIA®)									1		
X₁₂ Supply backup											
Supercap										0	
Supercap + battery										1	
X₁₃ Interface											
S0 output											1
X₁₄X₁₅X₁₆ Country code											XXX

Configuration – software

	Z1	Z2	Z3	Z4
Z1 Decimals in display				
7.0	1			
6.1	2			
7.2	3			
6.3	4			
Z2 LED configuration				
LED switched off without consumption		1		
LED switched on without consumption		2		
Z3 Primary module configuration				
	I/O 1	I/O 2		
No function	-	-		00
4-tariff	Input	Input		01
4-tariff inverted	Input	Input		02
Pulse in/Alarm in	Input	Input		03
Pulse in/Alarm in inverted	Input	Input		04
Pulse in/A+ out	Input	Output		05
R+ out/A+ out	Output	Output		06
2-tariff Alarm in	Input	Input		07
2-tariff inverted/Alarm in	Input	Input		08
2-tariff/Alarm in inverted	Input	Input		09
2-tariff inverted/Alarm in inverted	Input	Input		10
2-tariff/A+ out	Input	Output		11
2-tariff inverted/A+ out	Input	Output		12
Pulse in/2-tariff	Input	Input		13
Pulse in/2-tariff inverted	Input	Input		14
Debiting stop pulse/-	Input	-		15
A- out/A+ out	Output	Output		16
Load control load/Status control	Input	Output		17
Pulse in/Load tariff sync	Input	Output		18
Pulse in inv./Load tariff sync	Input	Output		19
Pulse in/Load tariff sync inverted	Input	Output		20
Pulse in inv./Load tariff sync inverted	Input	Output		21
4-tariff sync load control	Input	Input		22
4-tariff sync load control inverted	Input	Input		23
Load control 1 /Load control 2	Output	Output		26
Pulse in/Load control	Input	Output		27
Pulse in/Toggle Load control 1 & 2	Input	Output		28
Earth fault module with 2x5A relays	I2C	I2C		29
Z4 Integration period/Load profile period				
15 min.				2
30 min.				3
60 min.				4

Configuration – software

	Z5	Z6		Z7	Z8
Z5 Display configuration			Z7 Debiting logging interval		
See display order form or contact Kamstrup			None (externally controlled)		
-			00		
Z6 Debiting stop date			Monthly		
1		01	Every second month, January		
2		02	Every second month, February		
3		03	Every third month, January		
4		04	Every third month, February		
5		05	Every third month, March		
6		06	Half-yearly, January		
7		07	Half-yearly, February		
8		08	Half-yearly, March		
9		09	Half-yearly, April		
10		10	Half-yearly, May		
11		11	Half-yearly, June		
12		12	Yearly, January		
13		13	Yearly, February		
14		14	Yearly, March		
15		15	Yearly, April		
16		16	Yearly, May		
17		17	Yearly, June		
18		18	Yearly, July		
19		19	Yearly, August		
20		20	Yearly, September		
21		21	Yearly, October		
22		22	Yearly, November		
23		23	Yearly, December		
24		24	Z8 Pulse out length/Alarm input		
25		25	30 msec pulse length/Alarm input deactivated		1
26		26	30 msec pulse length/Alarm input active		2
27		27	80 msec pulse length/Alarm input deactivated		3
28		28	80 msec pulse length/Alarm input active		4

Configuration – software

	Z9	Z10	Z11	Z12
Z9 Disconnect setup				
See Disconnect order form or contact Kamstrup	-			
Z10 Analysis logger setup				
Default setup		000		
Z11 Greenwich Mean Time (GMT)				
0	GMT		00	
1	+ 1 Hour [DK/NO/SE/DE/FR/ES]		01	
2	+ 2 Hours [FI]		02	
3	+ 3 Hours		03	
4	+ 4 Hours		04	
5	+ 5 Hours		05	
6	+ 6 Hours		06	
7	+ 7 Hours		07	
8	+ 8 Hours		08	
9	+ 9 Hours		09	
10	+ 10 Hours		10	
11	+ 11 Hours		11	
12	+ 12 Hours		12	
-11	- 11 Hours		13	
-10	- 10 Hours		14	
-9	- 9 Hours		15	
-8	- 8 Hours		16	
-7	- 7 Hours		17	
-6	- 6 Hours		18	
-5	- 5 Hours		19	
-4	- 4 Hours		20	
-3	- 3 Hours		21	
-2	- 2 Hours		22	
-1	- 1 Hours		23	
Z12 Unit pulse input				
None				00
kWh				01
m ³				02
L				03

Configuration – software

	Z13	Z14	Z15	Z16	Z17	Z18	Z19	Z20
Z13 Tariff control plan								
See tariff order form or contact Kamstrup	-							
Tariff disabled	000							
Module Port control	001							
Register control	002							
Z14 Load control plan								
See load control order form or contact Kamstrup	-							
Load control disabled	000							
Register control	001							
Z15 Daylight saving time/Summer-winter time table								
None			000					
EU			001					
Z16 Frequency code Protocol								
None				000				
CH 318 K				318				
EU 319 K				319				
SE 326 K				326				
SE 328 K				328				
SE 329 K				329				
NO 337 K				337				
NO 338 K				338				
NO 339 K				339				
DK 348 K				348				
DK 349 K				349				
FI 356 K				356				
FI 357 K				357				
FI 359 K				359				
PL 369 K				369				
AT 376 K				376				
AT 379 K				379				
Z17 Push button 2 setup								
See PB2 order form or contact Kamstrup					-			
No PB2 setup					000			
Z18 1107 configuration								
See 1107 order form or contact Kamstrup						-		
Disabled						000		
Mode A and C, UD (only available for variant 1)						001		
Mode A and C, UD2 (only available for variant 1)						002		
Z19 Breaker position								
No breaker							0	
Connected							1	
Disconnected							2	
Z20 Calendar setup								
See Calendar setup order form or contact Kamstrup								-


Configuration – software

	Z25	Z26	Z27	Z28	Z29	Z30
Z25 Debitlogger 2 interval						
Daily	1					
Weekly	2					
Monthly	3					
Z26 – Alarm configuration						
No alarms enabled		000				
Z27 – Load profile data (DLMS)						
Absolute values			1			
Delta values (only available for variant 2)			2			
Z28 – Local interface encryption						
N/A (only for variant 1)				0		
Enabled (only available for variant 2)				1		
Disabled (only available for variant 2)				2		
Z29 – Load profile configuration						
A+					1	
A+/A-					2	
A+/A-/R+/R-					3	
A+/A-/R1/R2/R3/R4 (only available for variant 2)					4	
A+/A-/R+/R-/R1/R2/R3/R4 (only available for variant 2)					5	
Z30 – Debit 2 logger configuration						
Profile 01						1
Profile 02 (only available for variant 2)						2

Installation

Connection diagrams

The connection diagram appears from the front of the meter.

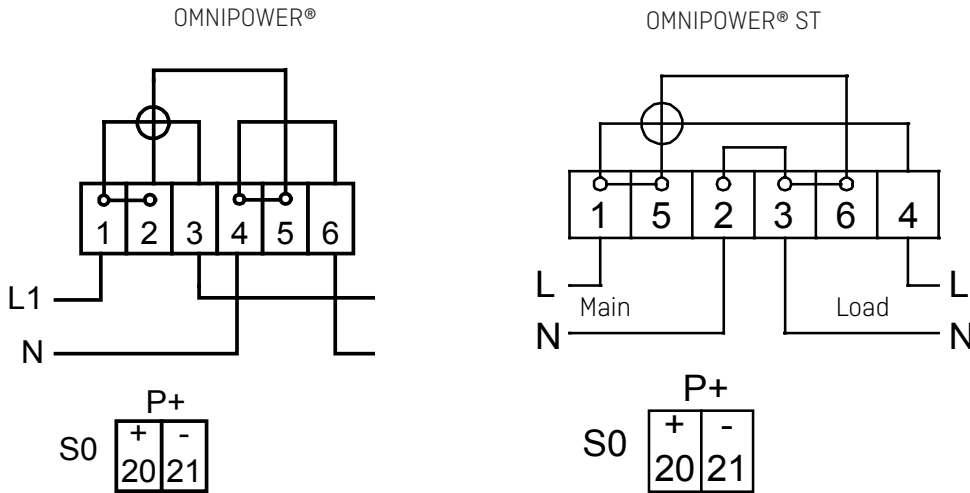

Safety and installation guidelines

The meter shall only be used for measuring electrical energy and shall operate within the specified values only.

The meter must be switched off when working on it. It can be highly dangerous to touch connected meter parts.

Current local standards, guidelines, regulations and instructions must be observed. Only authorized personnel are permitted to install electricity meters.

Meters for direct connection must be protected against short circuit by a backup fuse in accordance with the maximum current stated on the meter.

The relevant backup fuse must therefore be removed and kept in a place where it cannot be inserted in the meter by unauthorized personnel.


The meter constant LED flashes proportionally to the consumed active energy.

Only authorized personnel are allowed to break the utility sealing.


Warning! The breaker function in the meter must **NOT** be used as safety function. When the meter's breaker function is used, the meter is still carrying a voltage.

Dimensions

OMNIPOWER®

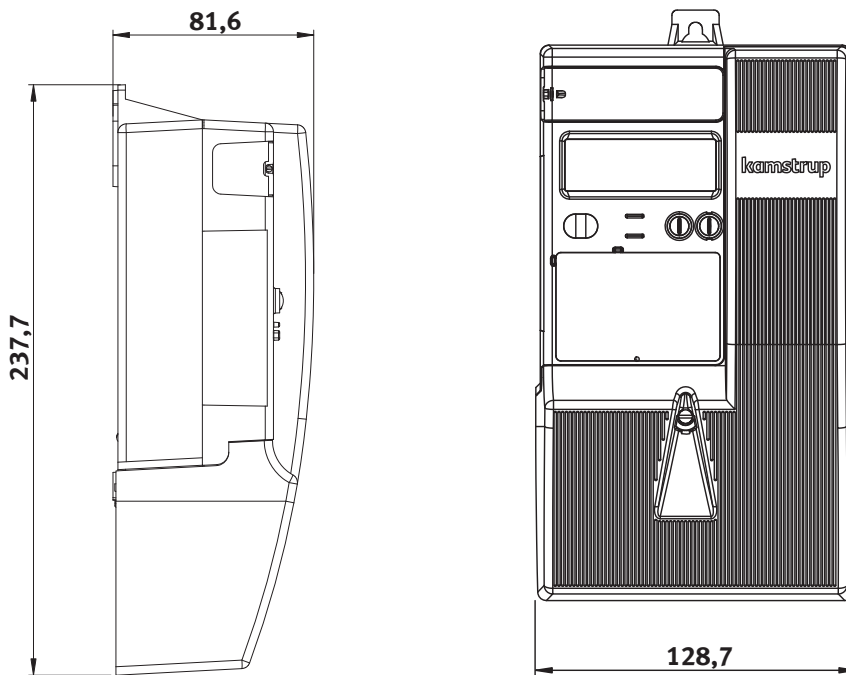

OMNIPOWER® ST

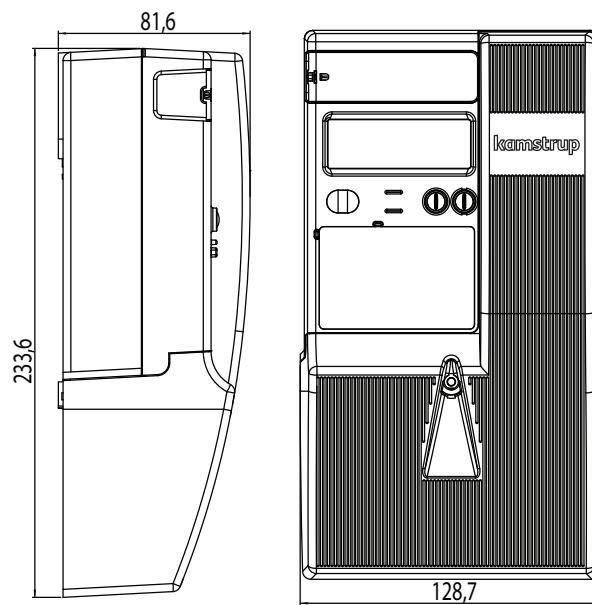

Accessories

Modules

IP101i, TCP/IP-module*	68 50 040
GSM8i 2G*	6819x0xxxxx
GSM8i 2G m/2x5A Load Control*	6819x5xxxxx
GSM8i 2G m/RS-485 add-on*	6819x6xxxxx
OMNICON® GSM**	681Axxxxxx
5A Load control module	68 50 058
M-Bus module, secondary addressing* (Wired)	68 50 068
2 x 5A load control module	68 50 069
RS485-module, multi drop*	68 50 072
Data-/pulse module, dual pulse, 9600	68 50 075
Tariff control, 4-tariff, 230 V input, current loop	68 50 076
Tariff control, 4-tariff, 230 V input	68 50 078
OMNICON® MUC-module**	68 50 079
Earth fault module**	68 50 080
Earth fault module with MUC module**	68 50 081
Wireless M-Bus, Submetering	68 50 083
RS-485 (Excl. LC/Tariff)	68 50 084

Configuration software

METERTOOL	68 99 580
-----------	-----------

Various

Standard OMNIPOWER® meter cover	59 60 370
Long OMNIPOWER® meter cover	59 60 316
Standard OMNIPOWER® ST meter cover	59 60 617
Long OMNIPOWER® ST meter cover	59 60 618
Optical reading head with USB plug	66 99 099
Optical reading head with 9-pole D-sub connector	66 99 102
METERTOOL kit for CT ratio programming	68 30 017

* for non Kamstrup systems only

** for OMNIA® system only

Kamstrup A/S

Industrivej 28, Stilling
 DK-8660 Skanderborg
 T: +45 89 93 10 00
 F: +45 89 93 10 01
 info@kamstrup.com
 kamstrup.com