

Data sheet

## OMNIPOWER® three-phase

- Three-phase residential meter
- Prepared for Smart Home applications
- Optimised for Smart Metering systems
- Secured against tampering
- Resistant to errors in the supply network
- Ultra-low power consumption
- Remote firmware update
- Power quality measurements according to EN 50160
- Type approved according to:
  - Active energy  
EN 50470-1 (MID)  
EN 50470-3 (MID)
  - Active energy  
and reactive energy  
IEC 62052-11  
IEC 62053-21  
IEC 62053-23
- Communication protocol:
  - DLMS/COSEM



## Content

---

Application	3
Functions	4
Approvals	8
Technical data	8
Connections	10
Communication	10
Consumer communication channel (CCC) module	10
Typical accuracy charts	11
Configuration – hardware	12
Configuration – software	13
Installation	17
Safety and installation guidelines	17
Dimensions	18
Accessories	19

## Application

---

Kamstrup OMNIPOWER® three-phase meter is a direct connected electricity meter for registration of electric energy. The meter is fully electronic without movable parts. Thus, energy registration is not affected by shock or impact during transport and mounting. Furthermore, measurements are correct no matter the physical mounting direction.

The shunt measuring principle secures good linearity and a considerable dynamic range. At the same time, the shunt measuring principle is immune to magnetism and DC currents.

The easily readable display scrolls automatically between readings, or readings can be changed manually by the consumer activating the left push button. The required display readings as well as their order are configurable.

In addition to being read from the display, data can be collected via Radio Mesh network, optical output or from the module area. The unique module area also permits external changing of tariffs, pulse inputs and outputs, and configuration as well as a wide range of communication media.

From the factory, the meter can be configured to measure both imported and exported energy. As it is constructed with three independent and galvanically separated measuring systems, the meter makes accurate measurements whether it measures 1, 2 or 3 phases. Measurements are saved in a permanent memory.

As default, Kamstrup OMNIPOWER® three-phase meter can generate load profiles in all four quadrants.

A load profile provides detailed information about consumed and produced energy. An additional logger with 24 channels contains data for analysis purposes.

As default, Kamstrup OMNIPOWER® three-phase meter is supplied with the functions Smart Disconnect and software controlled Prepayment.

The OMNIPOWER® three-phase meter is also designed to support extended analysis of the main grid using measurements of THD, Power Factor, Voltage unbalance, Voltage variations and sags and swells.

The meter registers loss of neutral conductor and allows automatic disconnection to minimize damages to household appliances.


In order to minimise the manual configuration during installation, the meter is pre-configured from the factory. Furthermore, the meter can be reconfigured via a Smart Metering system.

## Functions

### Display

Kamstrup OMNIPOWER® three-phase meter is provided with a Liquid Crystal Display (LCD). The registers that can be read from the display depend on the chosen configuration. It is also possible to remotely configure the display.

The display configuration is constructed as three independent display lists: One for automatic shift function, one for manual shift function and one for battery-powered shift function. The display is constructed of segments as shown in the figure below.

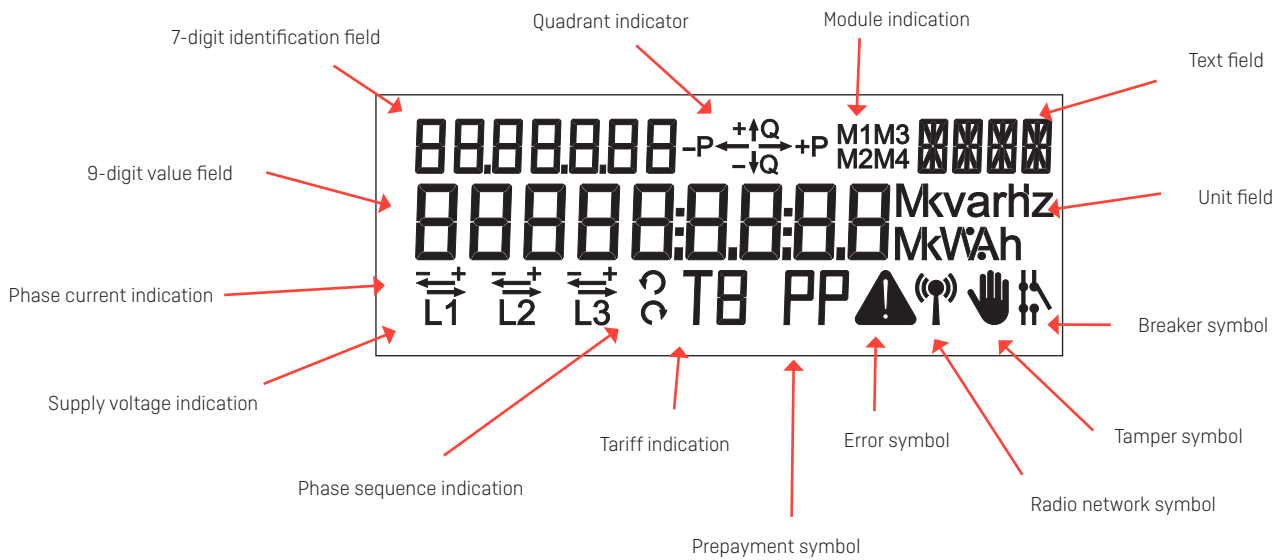

9-digit value field:	This field is used for displaying register values.
Unit field:	This field is used for displaying the units that are related to the value field.
7-digit identification field:	OBIS code identification of the value in the value field.
Quadrant indicator:	Indicates the current load type.
Text field:	Contains additional text in connection with the meter's function.
Module indication:	Indicates if and which modules that communicate in the display.
Error symbol:	Indicates critical internal errors.
Breaker symbol:	Indicates the current position of the breaker if smart disconnect is enabled. If smart disconnect is disabled or the meter is without breaker, there is no indication.
Tamper symbol:	Indicates magnetic influence or opening of the terminal cover, either temporary or permanent.
Radio Network symbol:	Indicates communication with AMR system.
Prepayment symbol:	Indicates whether the prepayment functionality is activated.
Tariff indication:	Indicates the current tariff if tariffs have been selected.
Supply voltage indicator:	Indicates that voltage is above the minimum threshold (160 V).
Phase current indication:	Indicates that the load is above the minimum threshold (2,3 W).
Phase sequence indication:	Indicates the phase sequence of the input phases.

↻ = L1L2L3    ↻ = L1L3L2

## Functions

---

### Display

The automatic shift function (scroll) changes between the selected readings every 10 seconds. Up to 16 readings can be selected.

The manual shift function changes through activation of the left push button. Up to 30 readings and the reading order can be selected. However, it is not possible to deselect the **legal** readings.

If the battery-operated shift function is selected, it becomes possible to read the display, also when the meter is not power supplied. Up to 8 readings can be selected, and shifts between readings are made by activating the push button.

The meter automatically returns from manual shift function to automatic scroll function two minutes after the last activation of the left push button.

### Energy reading

Kamstrup OMNIPOWER® three-phase meter has a shunt for measuring system for current measurement and resistance division for voltage measurement.

Energy consumption is calculated as an expression of the current compared to the phase voltage and time.

The energy registration per measuring system is communicated to the meter's legal processor via the meter's own internal bus system and is summed in the meter's main registers.

### Permanent memory

Measured and calculated data are stored in the meter's permanent memory. Data are stored by every change of energy register values.

Furthermore, the below mentioned values are stored at the end of a debiting period:

Various	Energy registers	Power registers
RTC w/Quality info	Active positive primary energy A+	Peak power P+max
Hour counter	Active negative primary energy A-	Peak power P+max RTC
Debiting stop counter	Reactive positive primary energy R+	Peak power P+max Tariff 1
Power threshold counter (A+)	Reactive negative primary energy R-	Peak power P+max Tariff 1 RTC
Pulse input	Apparent positive energy E+	Peak power P+max Tariff 2
	Apparent negative energy E-	Peak power P+max Tariff 2 RTC
	Active positive primary energy A+ Tariff 1	Accumulated peak power P+max
	Active positive primary energy A+ Tariff 2	Accumulated peak power P+max Tariff 1
	Active positive primary energy A+ Tariff 3	Accumulated peak power P+max Tariff 2
	Active positive primary energy A+ Tariff 4	Peak power Q+max
	Reactive positive primary energy R+ Tariff 1	Peak power Q+max RTC
	Reactive positive primary energy R+ Tariff 2	Peak power Q+max Tariff 1
	Reactive positive primary energy R+ Tariff 3	Peak power Q+max Tariff 1 RTC
	Reactive positive primary energy R+ Tariff 4	Peak power Q+max Tariff 2
		Peak power Q+max Tariff 2 RTC
		Accumulated peak power Q+max
		Peak power S+max
		Peak power S+max RTC
		Peak power S-max
		Peak power S-max RTC

## Functions

---

### Plug-in modules

Kamstrup OMNIPower® three-phase meter can be mounted/retrofitted with plug-in modules without subsequent re-verification.

The module communicates with the meter's microprocessor via an internal data bus. This provides innumerable functional possibilities such as extra pulse output, tariff, load control and data communication via e.g. GSM/GPRS, and M-Bus.

### Optical reading

An optical interface is placed on the front of the meter. This optical connection can be used to read data or configure e.g. display set-up, meter number and other settings.

Changes via the optical connection can be made by using the software program METERTOOL OMNIPower®.

It is not possible to change the meter's legal data.

### S0 pulse output

Emits pulses of active energy at 1000 pulses per kWh. The pulses are emitted synchronously with the LED. The maximum voltage, which may be connected to the S0 output, is 27 V DC (at 1 k $\Omega$ ), and the maximum current, which can be drawn through the output, is 27 mA. The pulse time is 30 msec.

### Breaker

Kamstrup OMNIPower® three-phase meter is available with integrated disconnection function, which makes it possible to disconnect the electricity meter's supply outputs. The disconnection can be made locally by activating the meter's push button, automatically via the functions Smart Disconnect or Prepayment, or remotely via an automatic Smart Metering system.

Do **NOT** use the disconnection as a safety function.

The reconnection can be made via the same media as the disconnection. Furthermore, connection via push button can be configured to only be permitted after previous release command from a Smart Metering system.

The breaker is a bistable breaker that maintains its current position in the event of a power failure and after the subsequent re-establishment of power.

## Functions

---

### Load profile\*

Load profiles can be configured to 15, 30 or 60 min. according to the integration period and for all four quadrants. The number of generated profiles corresponds to the selected energy type for the meter.

Logging depth in days:			
Minutes	15	30	60
A+	278	556	1113
A+/A-	235	470	941
A+/A-/R+/R-	180	360	720
A+/A-/R1/R2/R3/R4	145	291	583
A+/A-/R+/R-/R1/R2/R3/R4	122	244	489

\* Load profile for Austria is limited to 60 days with a fixed integration period of 15 min

The logging depths listed above apply to OMNIA 3.0 firmware and newer.

### Analysis logger

Kamstrup OMNIPOWER® three-phase meter is provided with a configurable analysis logger. The logging depth will be depending on the configuration of the meter as well as the number of registers. The analysis logger can register data from up to 24 different registers at a time.

Kamstrup OMNIPOWER® three-phase meter is available with default setting which can be reconfigured subsequently via METERTOOL OMNIPOWER® or a Smart Metering system.

### Tamper proof

Apart from the mechanical sealing, the meter also reveals tampering. In case of attempts of tampering (mechanical or magnetic), an alarm is activated which is time and date stamped and saved to the permanent memory. Alarms can be automatically transferred via the communication infrastructure and, in some cases, indicated on the display. Magnetic influence does not affect the measuring accuracy.

## Approvals

---

Kamstrup OMNIPOWER® three-phase meter is type approved according to the Measuring Instruments Directive (MID) for active positive energy and according to the national requirements for other energy types, where required.

<b>Approval</b>	<b>Norm</b>
Type test according to:	
- Active energy	EN 50470-1 EN 50470-3
- Reactive energy and active energy	IEC 62052-11 IEC 62053-21 IEC 62053-23

<b>Various</b>	<b>Norm</b>
Terminal	DIN 43857
S0 pulse output	DIN 43864
Optical reading	DLMS/COSEM
OBIS/EDIS codes	IEC 62056-61

## Technical data

---

Measuring principle							
- Current	Single-phased current measurements by current shunt						
- Voltage	Single-phased voltage measurements by voltage divider						
Nominal voltage $U_n$	3x230 VAC -20 % - +15 % (for Aron meter only) 1x230 VAC -20 % - +15 % 2x230/400 VAC -20 % - +15 % 3x230/400 VAC -20 % - +15 %						
Current	$I_{min} - I_{ref} (I_{max})$						
	<table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th colspan="2" style="background-color: #e0e0e0;"><b>Kamstrup OMNIPOWER® three-phase meter</b></th> </tr> <tr> <th style="width: 50%;">Without breaker</th> <th style="width: 50%;">With breaker</th> </tr> </thead> <tbody> <tr> <td style="background-color: #e0e0e0;">0.25-5(100)A 35 mm<sup>2</sup></td> <td style="background-color: #e0e0e0;">0.25-5(100)A 35 mm<sup>2</sup></td> </tr> </tbody> </table>	<b>Kamstrup OMNIPOWER® three-phase meter</b>		Without breaker	With breaker	0.25-5(100)A 35 mm <sup>2</sup>	0.25-5(100)A 35 mm <sup>2</sup>
<b>Kamstrup OMNIPOWER® three-phase meter</b>							
Without breaker	With breaker						
0.25-5(100)A 35 mm <sup>2</sup>	0.25-5(100)A 35 mm <sup>2</sup>						
Accuracy class	MID: Class A, Class B IEC: Class 2, Class 1						
Nominal frequency $f_n$	50 Hz ± 5 % or 60 Hz ± 5 %						
Phase displacement	Unlimited						
Operating temperature	-40 °C - +70 °C						
Storage temperature	-40 °C - +85 °C						



## Technical data

---

Protection class	IP54
Protection class	II
Relative humidity	< 75 % year's average at 21 °C < 95 % less than 30 days/year, at 25 °C
Weight	1300 g with breaker/1000 g without breaker
Application area	Indoors or outdoors in suitable meter cabinet
Internal consumption*	

OMNIPOWER® three-phase meter	Without breaker	With breaker
Maximum power consumption of the current circuits with basic current	0.01 VA	0,01 VA
Maximum power consumption of the voltage circuits	0.4 VA 0.1 W	0.4 VA 0.1 W

\* Measured by notified body during type test. Measured at phase L1.

Materials	Glass reinforced polycarbonate
Data storage	EEPROM, > 10 years without voltage
Display	LCD, 7 mm digit height (value field) LCD, 5 mm digit height (identification readings) LCD, 3 mm digit height (voltage and tariff readings)
Meter constant	1000 imp/kWh
S0 pulse diode	1000 imp/kWh, kvarh Pulse time 30 ms ± 10 %
S0 pulse output	1000 imp/kWh Pulse time 30 ms ± 10 %
Short circuit level	4500 A

### Real Time Clock (RTC)

Accuracy	Typically 5 ppm at 23 °C
Backup	Battery life > 10 years at normal operation Supercap life > 10 years at normal operation
Supercap operating time	7 days fully charged

## Connections

---

Terminals Size	Elevator terminals For use with connection:		
	Multi-cored	7-cored	Massive/terminal tube
35 mm <sup>2</sup>	≥ 6 mm <sup>2</sup>	≥ 6 mm <sup>2</sup>	≥ 2,5 mm <sup>2</sup>
Screws	Pz 2 or straight slot Torque 2.5 - 3 Nm		

Voltage output	0.25 - 1.5 mm <sup>2</sup> , 5 mm terminal forks
Screws	TORX Tx 10 Torque 1 Nm

## Communication

---

Kamstrup OMNIPOWER® three-phase meter can be supplied or retrofitted with communication modules. The modules function as inputs and outputs for the meter. Mounting of modules does not require subsequent verification of the meter.

### Communication Modules

Serial	Serial RS-485 or RS-232 communication or current loop with pulse inputs, tariff inputs or load control.
M-Bus	Reading via wired M-Bus system.
GSM/GPRS	Collection of consumption data via GSM/GPRS communication. Supports SMS reading.

### Integrated radio

Kamstrup OMNIPOWER® three-phase meter can be provided with built-in radio communication.






Radio communication therefore requires no mounting/retrofitting of communication module. If the meter's module area is used for another type of communication, the built-in radio communication can be deactivated.

## Consumer communication channel (CCC) module

---

In Kamstrup OMNIPOWER® three-phase meter it is possible to mount a CCC module. The module can be used for communication and data exchange with Smart Home products such as energy displays and external relays. The CCC module is mounted without using tools or breaking the seal of the meter. The mounting may be done by e.g. the consumer himself.

## Typical accuracy charts

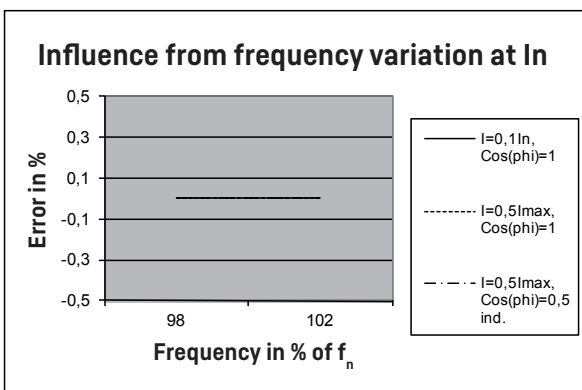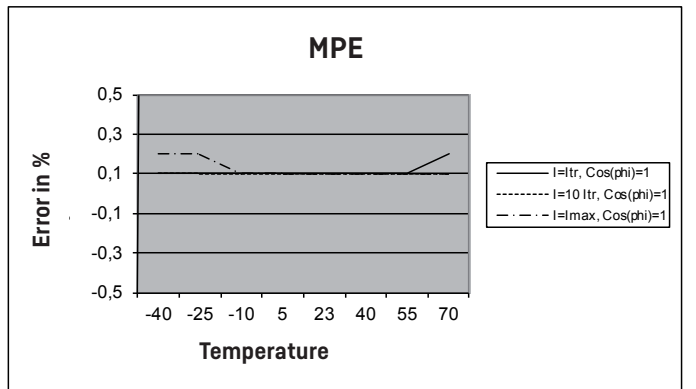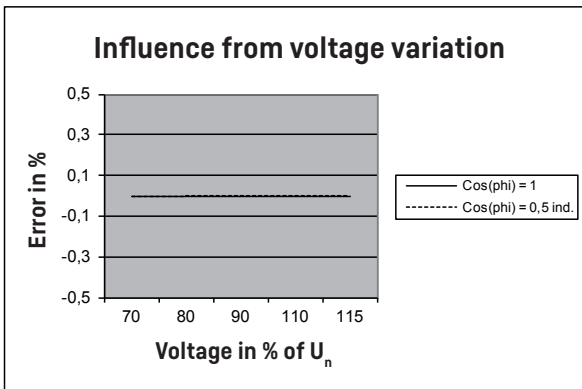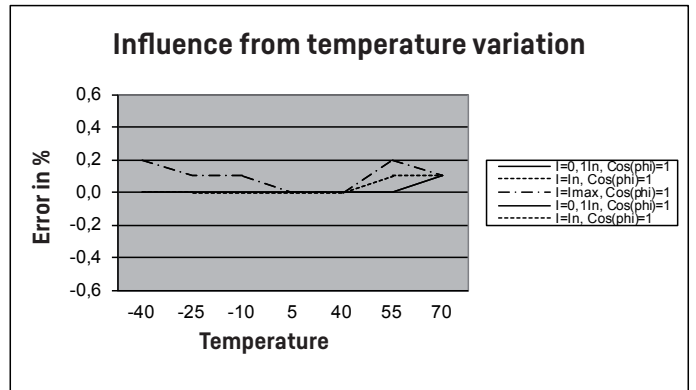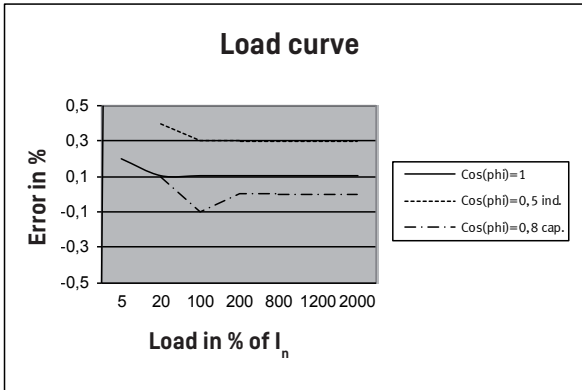

### MPE (Maximum Permissible Error)

Error composed of:

- current load
- voltage variation
- frequency variation
- temperature variation

## Configuration – hardware

	68	X <sub>1</sub> - X <sub>2</sub>	X <sub>3</sub> - X <sub>4</sub>	X <sub>5</sub>	X <sub>6</sub> - X <sub>7</sub>	X <sub>8</sub>	X <sub>9</sub> - X <sub>10</sub>	X <sub>11</sub>	X <sub>12</sub>	X <sub>13</sub> - X <sub>14</sub>	X <sub>15</sub>	X <sub>16</sub>
<b>X<sub>1</sub> - Metertype no. Version</b>												
Three-phase meter		4										
<b>X<sub>2</sub> - Type no. Version</b>												
OMNIPOWER®		1										
<b>X<sub>3</sub> - Housing</b>												
Standard			1									
50 mm <sup>2</sup> terminals with 2 screws			5									
<b>X<sub>4</sub> - Measuring systems</b>												
2 system				2								
3 systems				3								
<b>X<sub>5</sub> - Current range</b>												
5-100A					1							
5-65A					4							
10-60A					6							
10-80A					7							
5-80A					8							
<b>X<sub>6</sub> - Accuracy Class</b>												
Class A						A						
Class B						B						
Class 2						2						
Class 1						1						
<b>X<sub>7</sub> - Generation</b>												
Generation N							N					
<b>X<sub>8</sub> - Variant</b>												
1. Variant								1				
2. Variant								2				
<b>X<sub>9</sub> - Energy type</b>												
A+									1			
A+/A-									2			
A+/A-/R+/R-									4			
<b>X<sub>10</sub> - Breaker</b>												
No breaker										0		
Standard breaker										3		
Breaker Version 2										5		
<b>X<sub>11</sub> - Communication</b>												
No radio											0	
Radio (for OMNIA®)											1	
<b>X<sub>12</sub> - Supply back-up</b>												
Supercap												0
Supercap + battery												1
<b>X<sub>13</sub> - Interface</b>												
None												0
S0 output												1
APS												2
<b>X<sub>14</sub>X<sub>15</sub>X<sub>16</sub> - Country code</b>												
Denmark												XXX

## Configuration – software

	Z1	Z2	Z3	Z4
<b>Z1 Decimals in display</b>				
7.0	1			
6.1	2			
7.2	3			
6.3	4			
<b>Z2 LED configuration</b>				
LED off at no consumption		1		
LED on at no consumption		2		
<b>Z3 Primary module configuration</b>				
	<b>I/O 1</b>	<b>I/O 2</b>		
No function	-	-		00
4-tariff	Input	Input		01
4-tariff inverted	Input	Input		02
Pulse in / Alarm in	Input	Input		03
Pulse in / Alarm in inverted	Input	Input		04
Pulse in / A+ out	Input	Output		05
R+ out / A+ out	Output	Output		06
2-tariff / Alarm in	Input	Input		07
2-tariff inverted / Alarm in	Input	Input		08
2-tariff / Alarm in inverted	Input	Input		09
2-tariff inverted / Alarm in inverted	Input	Input		10
2-tariff / A+ out	Input	Output		11
2-tariff inverted / A+ out	Input	Output		12
Pulse in / 2-tariff	Input	Input		13
Pulse in / 2-tariff inverted	Input	Input		14
Debiting stop pulse / -	Input	-		15
A- out / A+ out	Output	Output		16
Load control load / Status control	Input	Output		17
Pulse in / Load tariff sync	Input	Output		18
Pulse in inv. / Load tariff sync	Input	Output		19
Pulse in / Load tariff sync inverted	Input	Output		20
Pulse in inv. / Load tariff sync inverted	Input	Output		21
4-tariff sync load control	Input	Input		22
4-tariff sync load control inverted	Input	Input		23
Load control 1 / Load control 2	Output	Output		26
Pulse in / Load control	Input	Output		27
Pulse in / Toggle Load control 1 & 2	Input	Output		28
Earth fault module with 2x5A relays	I2C	I2C		29
<b>Z4 Integration period / Load profile period</b>				
15 min.				2
30 min.				3
60 min.				4

## Configuration – software

	Z5	Z6
<b>Z5 - Display configuration</b>		
See display order form or contact Kamstrup	-	
<b>Z6 Debiting stop date</b>		
1		01
2		02
3		03
4		04
5		05
6		06
7		07
8		08
9		09
10		10
11		11
12		12
13		13
14		14
15		15
16		16
17		17
18		18
19		19
20		20
21		21
22		22
23		23
24		24
25		25
26		26
27		27
28		28

	Z7	Z8
<b>Z7 - Debiting logging interval</b>		
None (externally controlled)		00
Monthly		01
Every second month, January		02
Every second month, February		03
Every third month, January		04
Every third month, February		05
Every third month, March		06
Half-yearly, January		07
Half-yearly, February		08
Half-yearly, March		09
Half-yearly, April		10
Half-yearly, May		11
Half-yearly, June		12
Yearly, January		13
Yearly, February		14
Yearly, March		15
Yearly, April		16
Yearly, May		17
Yearly, June		18
Yearly, July		19
Yearly, August		20
Yearly, September		21
Yearly, October		22
Yearly, November		23
Yearly, December		24
<b>Z8 Pulse out length / Alarm input</b>		
30 msec pulse length / Alarm input deactivated		1
30 msec pulse length / Alarm input active		2
80 msec pulse length / Alarm input deactivated		3
80 msec pulse length / Alarm input active		4

## Configuration – software

	Z9	Z10	Z11	Z12
<b>Z9 Disconnect setup</b>				
See disconnect order form or contact Kamstrup	-			
<b>Z10 Analysis logger setup</b>				
Default setup		000		
<b>Z11 Greenwich Mean Time (GMT)</b>				
0	London time		00	
1	+ 1 Hour (DK/NO/SE/DE/FR/ES)		01	
2	+ 2 Hours (FI)		02	
3	+ 3 Hours		03	
4	+ 4 Hours		04	
5	+ 5 Hours		05	
6	+ 6 Hours		06	
7	+ 7 Hours		07	
8	+ 8 Hours		08	
9	+ 9 Hours		09	
10	+ 10 Hours		10	
11	+ 11 Hours		11	
12	+ 12 Hours		12	
-11	- 11 Hours		13	
-10	- 10 Hours		14	
-9	- 9 Hours		15	
-8	- 8 Hours		16	
-7	- 7 Hours		17	
-6	- 6 Hours		18	
-5	- 5 Hours		19	
-4	- 4 Hours		20	
-3	- 3 Hours		21	
-2	- 2 Hours		22	
-1	- 1 Hours		23	
<b>Z12 Unit pulse input</b>				
None				00
kWh				01
m <sup>3</sup>				02
L				03

## Configuration – software

	Z13	Z14	Z15	Z16	Z17	Z18	Z19	Z20
<b>Z13 Tariff control plan</b>								
See tariff order form or contact Kamstrup	-							
Tariff disabled	000							
Module Port control	001							
Register control	002							
<b>Z14 Load control plan</b>								
See load control order form or contact Kamstrup	-							
Load control disabled	000							
Register control	001							
<b>Z15 Daylight Saving time / Summer-winter time table</b>								
None			000					
EU			001					
<b>Z16 Frequency code Protocol</b>								
None				000				
CH 318 K				318				
EU 319 K				319				
SE 326 K				326				
SE 328 K				328				
SE 329 K				329				
NO 337 K				337				
NO 338 K				338				
NO 339 K				339				
DK 348 K				348				
DK 349 K				349				
FI 356 K				356				
FI 357 K				357				
FI 359 K				359				
PL 369 K				369				
AT 378 K				378				
AT 379 K				379				
<b>Z17 Push button 2 setup</b>								
See PB2 order form or contact Kamstrup					-			
No PB2 setup					000			
<b>Z18 1107 configuration</b>								
See 1107 order form or contact Kamstrup						-		
Disabled						000		
Mode A and C, UD (only available for variant 1)						001		
Mode A and C, UD2 (only available for variant 1)						002		
<b>Z19 Breaker position</b>								
No breaker							0	
Connected							1	
Disconnected							2	
<b>Z20 Calendar setup</b>								
See Calendar setup order form or contact Kamstrup								-





## Configuration – software

	Z25	Z26	Z27	Z28	Z29	Z30
<b>Z25 Debitlogger 2 interval</b>						
Daily	1					
Weekly	2					
Monthly	3					
<b>Z26 – Alarm configuration</b>						
No alarms enabled		000				
<b>Z27 – Load profile data (DLMS)</b>						
Absolute values			1			
Delta values (only available for variant 2)			2			
<b>Z28 – Local interface encryption</b>						
N/A (only for variant 1)				0		
Enabled (only available for variant 2)				1		
Disabled (only available for variant 2)				2		
<b>Z29 – Load profile configuration</b>						
A+					1	
A+/A-					2	
A+/A-/R+/R-					3	
A+/A-/R1/R2/R3/R4 (only available for variant 2)					4	
A+/A-/R+/R-/R1/R2/R3/R4 (only available for variant 2)					5	
<b>Z30 – Debit 2 logger configuration</b>						
Profile 01						1
Profile 02 (only available for variant 2)						2

## Installation

### Connection diagrams

Connection diagram appears from the front of the meter.

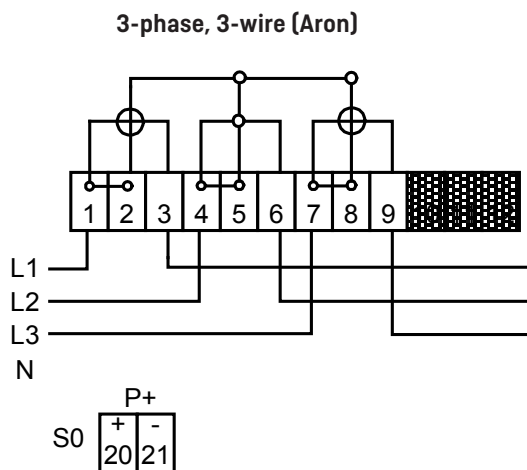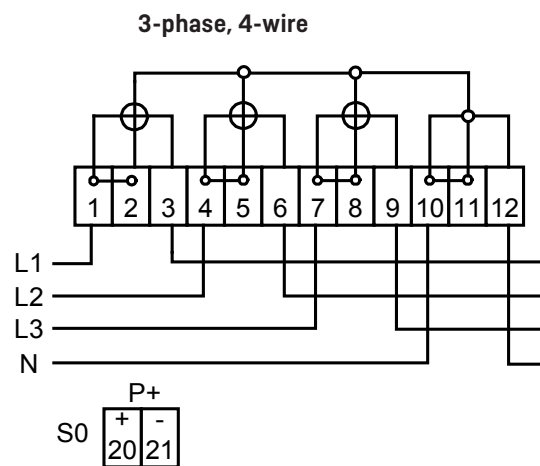

## Safety and installation guidelines

---

The meter shall only be used for measuring electrical energy and shall operate within the specified values only.

The meter must be switched off when working on it. It can be highly dangerous to touch connected meter parts.

Current local standards, guidelines, regulations and instructions must be observed. Only authorized personnel are permitted to install electricity meters.

Meters for direct connection must be protected against short circuit by a backup fuse in accordance with the maximum current stated on the meter.

The relevant backup fuse must therefore be removed and kept in a place where it cannot be inserted in the meter by unauthorized personnel.


The meter constant LED flashes proportionally to the consumed active energy.

Only authorized personnel must break the utility sealing.

**Warning!** The breaker function in the meter must **NOT** be used as safety function. When the meter's breaker function is used, the meter is still carrying a voltage.

## Dimensions

---

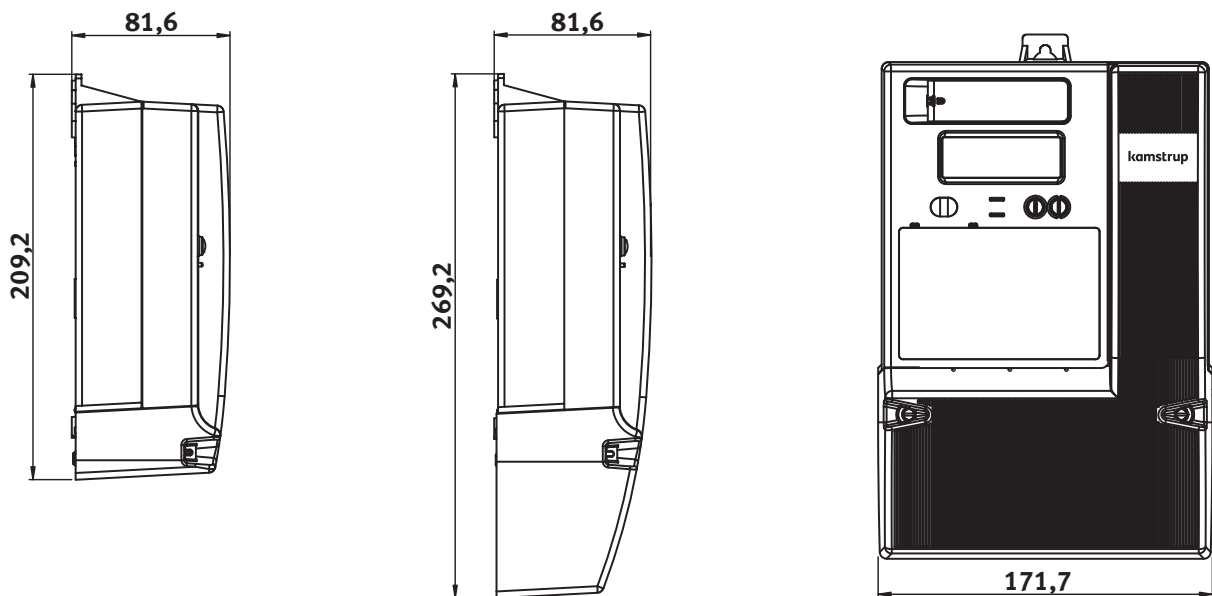

## Accessories

---

### Modules

IP101i, TCP/IP-module*	68 50 040
GSM8i 2G*	6819x0xxxxx
GSM8i 2G m/ 2x5A Load Control*	6819x5xxxxx
GSM8i 2G m/ RS-485 add-on*	6819x6xxxxx
OMNICON® GSM**	681Axxxxxx
5A Load control module	68 50 058
M-Bus module, secondary addressing*	68 50 068
2 x 5A load control modules	68 50 069
RS485-module, multi drop*	68 50 072
Data-/pulse module, dual pulse, 9600	68 50 075
Tariff control, 4-tariff, 230 V input, current loop	68 50 076
Tariff control, 4-tariff, 230 V input	68 50 078
OMNICON® MUC-module**	68 50 079
Earth fault module**	68 50 080
Earth fault module with MUC module**	68 50 081
Wireless M-Bus, Submetering	68 50 083
RS-485 (Excl. LC/Tariff)	68 50 084

### Software

Configurations SW, METERTOOL	68 99 580
------------------------------	-----------

### Various

Standard meter cover	59 60 370
Long meter cover, 60mm	59 60 316
Extra long terminal cover, 100 mm	59 60 317
Optical reading head with USB plug	66 99 099
Optical reading head with 9-pole D-sub connector	66 99 102
METERTOOL kit for CT ratio programming	68 30 017

\* for non Kamstrup systems only

\*\* for OMNIA® system only

---

### Kamstrup A/S

Industrivej 28, Stilling  
 DK-8660 Skanderborg  
 T: +45 89 93 10 00  
 F: +45 89 93 10 01  
 info@kamstrup.dk  
 kamstrup.com